

Customer Experience Center  
1-800-331-4331



*moving forward ▶*

# ***COROLLA***



***2007  
Pocket Reference Guide***

MN 00452-PRG07-COR  
Printed in USA 6/06

# 2007 Corolla

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla.

## ! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description Corolla operations. Every Corolla owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


## Seat belts-Shoulder belt anchor

Squeeze lock release  
to lower or raise

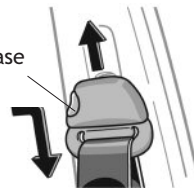


## Spare tire & tools

### Tool location

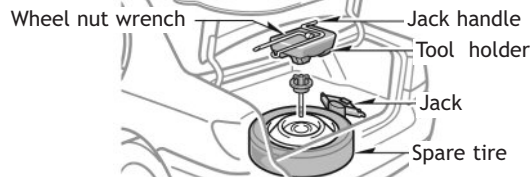


### Removing the spare tire

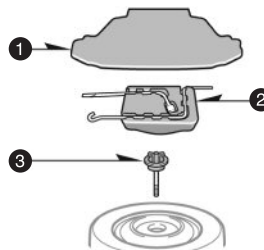

- 1 Raise the luggage compartment floor panel.
- 2 Remove the tool holder and tools.
- 3 Loosen and remove bolt with spacer.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Trunk-Internal release

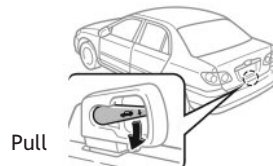

# INDEX

Item	Page no.
<b>OVERVIEW</b>	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
Trunk release	6
<b>FEATURES/OPERATIONS</b>	
Air Conditioning/Heating	15
Audio	14-15
<b>Auto lock functions<sup>1</sup></b>	<b>8</b>
Automatic Transmission	8
Clock	15
Cruise control	10
Cup holders	13
Door locks-Power	13
Light control-Instrument panel	13
Lights & turn signals	11
Moonroof	12
Parking brake	9
Power outlets	13
Seat adjustments-Front	9
Seat adjustments-Rear	9
Seats-Head restraints	10
Tilt steering wheel	10
Windows-Power	12
Windshield wiper & washer	12
<b>SAFETY AND EMERGENCY FEATURES</b>	
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	17
Spare tire & tools	17
Tire Pressure Warning System reset	16
Trunk-Internal release	17

<sup>1</sup> Programmable by customer. Refer to the Owner's Manual for instructions and more information.


OVERVIEW

FEATURES/OPERATIONS

SAFETY AND EMERGENCY FEATURES

# OVERVIEW

## Instrument panel

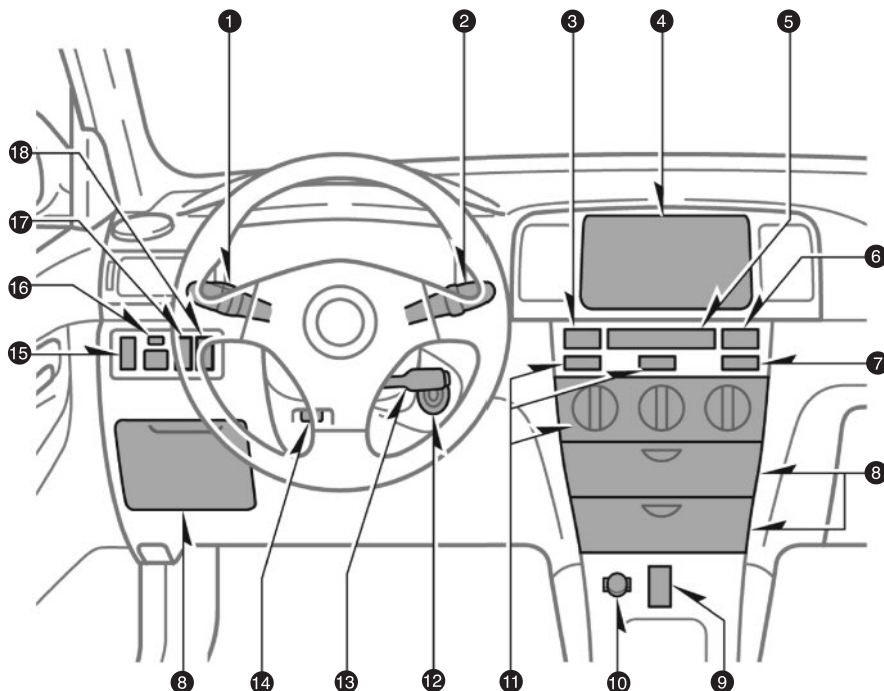


- ❶ Headlight, turn signal and front fog light\* controls
- ❷ Wiper and washer controls
- ❸ Emergency flasher switch
- ❹ Audio system
- ❺ Clock
- ❻ Front passenger occupant classification indicator/  
Front passenger seat belt reminder light
- ❼ Rear window defogger switch
- ❽ Auxiliary boxes
- ❾ "TRAC OFF" (Traction Control "OFF")\*
- ❿ 12V DC Power outlet/Cigarette lighter\*
- ⓫ Air Conditioning\*/Heater controls

- ❿ Ignition switch
- ⓫ Cruise control\*
- ⓬ Tilt steering lock release
- ⓭ Instrument panel light control
- ⓮ Power rear view mirror control
- ⓯ Tire Pressure Warning System reset\*
- ⓰ Theft deterrent system\*/Engine immobilizer  
indicator light


\* If equipped

Instrument cluster

CE/LE models

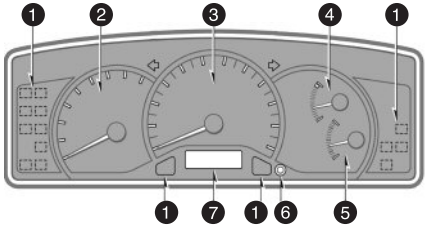


S model

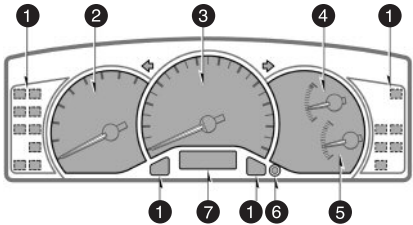



- 1 Service indicator and reminder
- 2 Tachometer
- 3 Speedometer
- 4 Engine coolant temperature
- 5 Fuel gauge
- 6 Trip meter reset knob
- 7 Odometer and two trip meters


Indicator symbols


**BRAKE** Brake system warning<sup>1</sup>


 Driver seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 9 mph)


 Front passenger seat belt reminder<sup>1</sup>  
(alarm will sound if speed is over 9 mph)


 Charging system warning<sup>1</sup>


 Malfunction/Check Engine indicator<sup>1</sup>

 Low engine oil pressure warning<sup>1</sup>


 Low fuel level warning<sup>1</sup>

 Open door warning<sup>1</sup>


 Airbag SRS warning<sup>1</sup>


 Low Tire Pressure Warning<sup>1</sup>


**VSC** Vehicle Stability Control/Traction Control warning<sup>1</sup>


 Low windshield washer fluid level warning<sup>1</sup>


**MAINT REQD** Engine oil replacement reminder<sup>1</sup>

 Front passenger occupant classification indicator

 Turn signal indicator

 Headlight low beam indicator

 Headlight high beam indicator

 Slip indicator

**O/D OFF** Overdrive-off indicator

**CRUISE** Cruise control indicator<sup>2</sup>

**ABS** Anti-lock Brake System warning<sup>1</sup>


**CAUTION**


When the Anti-lock Brake System (ABS) function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the Anti-lock Brake System work for you, just hold the brake pedal down more firmly. Do not pump the brake as this will result in reduced braking performance.

<sup>1</sup> For details, refer to “Service reminder indicators and warning buzzers,” Section 1-6, 2007 Owner’s Manual.

<sup>2</sup> If this light flashes, refer to “Cruise control,” Section 1-7, 2007 Owner’s Manual.

Fuel tank door release and cap

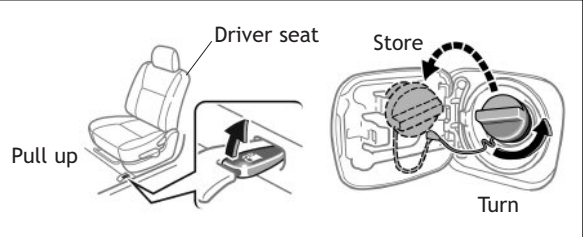

**NOTE:** Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.

Trunk release



Keyless entry (if equipped)

**Locking operation**

Push

A diagram of a car with all four doors closed. A key fob is shown with a "LOCK" button highlighted.

**Unlocking operation**

Push ONCE: Driver door  
TWICE: All doors

A diagram of a car with all four doors open. A key fob is shown with an "UNLOCK" button highlighted.


**NOTE:** After unlocking, if a door is not opened within thirty (30) seconds, all doors will relock for safety.

Alarm operation


Push and hold

A diagram of a car with an alarm sound effect. A key fob is shown with a "PANIC" button highlighted.

Hood release

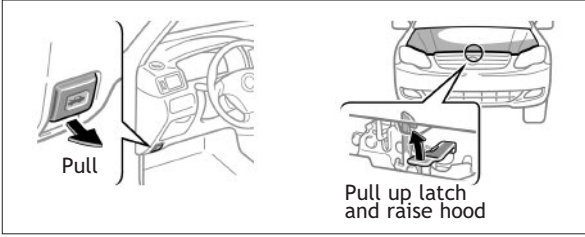

Engine maintenance

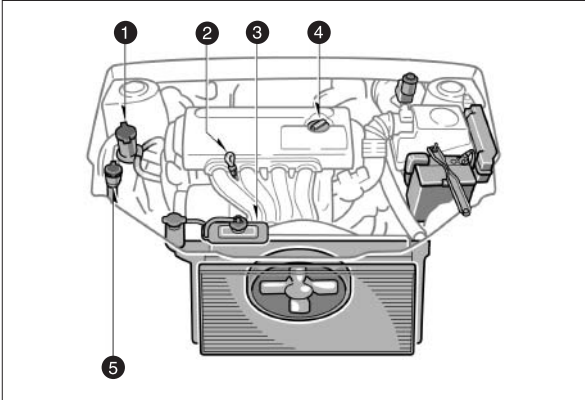

- 1 Power steering fluid reservoir
- 2 Engine oil level dipstick
- 3 Engine coolant reservoir
- 4 Engine oil filler cap
- 5 Windshield washer fluid tank

**Note:** Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “Owner’s Warranty Information Booklet,” “Scheduled Maintenance Guide” or “Owner’s Manual Supplement.”

# FEATURES/OPERATIONS


## Auto lock functions Automatic Transmission only

Automatic door locks can be programmed to operate in 4 different modes.

- Doors lock when shifting from “Park.”
- Auto lock function cancelled.
- Doors lock when shifting from “Park,” and unlock when shifting into “Park.”
- Doors lock when shifting from Park, and unlock when the ignition switch is turned to the “ACC” or “LOCK” position.

Refer to the *Owner's Manual* for more details.

## Automatic Transmission (if equipped)

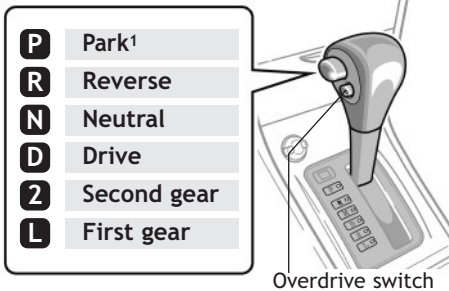


<sup>1</sup> The ignition switch must be ON and the brake pedal depressed to shift from “Park.”

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the “D” position.

### Overdrive switch

To turn “ON” or “OFF” Depress the overdrive switch to choose either three-speed (“OFF”) or four-speed (“ON”) operation. During normal driving conditions, always drive with overdrive “ON;” this allows the transmission to shift automatically into four-speed operation at higher speeds, increasing fuel economy. If the indicator light on the instrument cluster is illuminated, overdrive is “OFF.” Turning off the engine will cause overdrive to return to the default “ON” setting.

## Parking brake

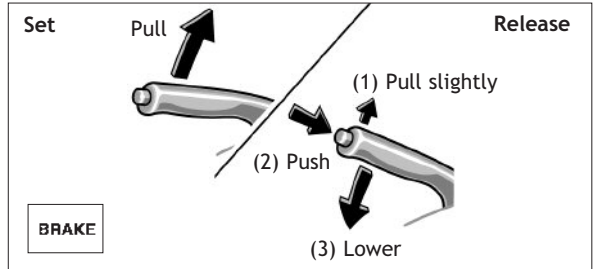


## Seat adjustments-Front




- ① Position
- ② Height crank (driver side only)
- ③ Seatback angle


## Seat adjustments-Rear

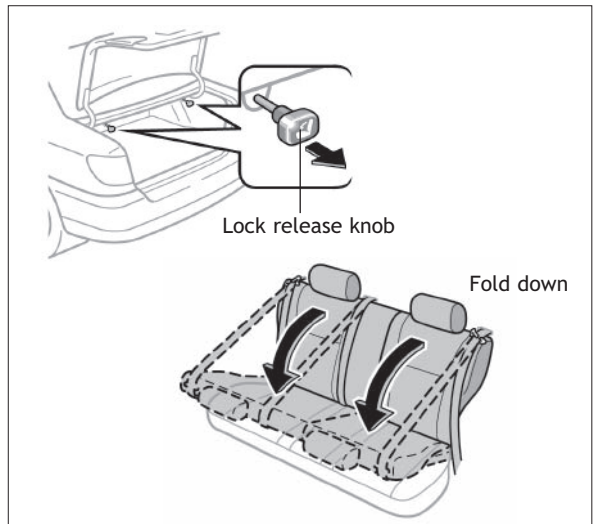

## Seats-Head restraints

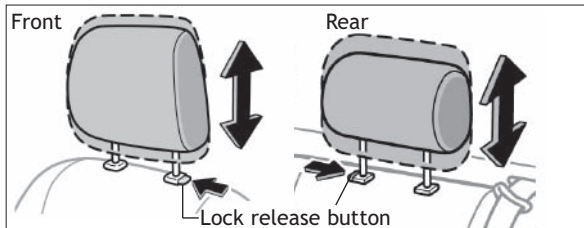

## Tilt steering wheel

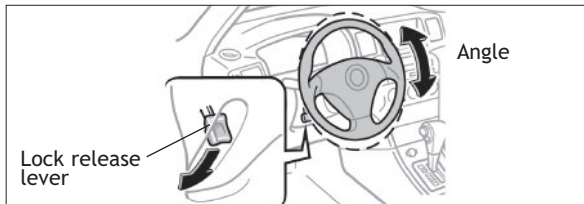


Hold wheel, push lever down, set angle, then return lever.


**Note:** Do not attempt to adjust while the vehicle is in motion.

## Cruise control (if equipped)

### Turning system ON/OFF

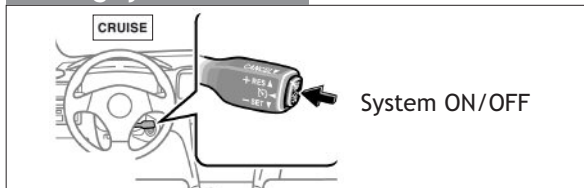

### Functions

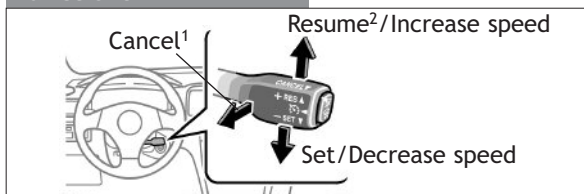


<sup>1</sup> The set speed may also be cancelled by depressing the brake pedal or the clutch pedal.

<sup>2</sup> The set speed may be resumed once vehicle speed exceeds 25 mph.

Refer to the *Owner's Manual* for more details.


## Lights & turn signals

### Headlights

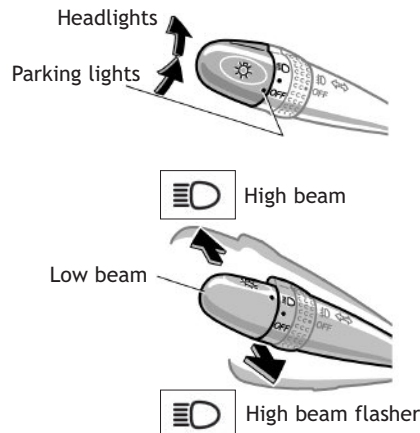

**Daytime Running Light system (DRL)** Automatically turns on the headlights at a reduced intensity.

### Turn signals

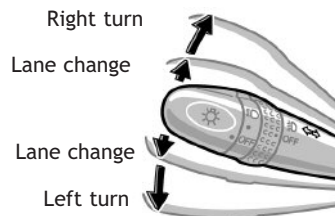


### Front fog lights (if equipped)




Front fog lights come on only when the headlights are on low beam.

Windshield wiper & washer

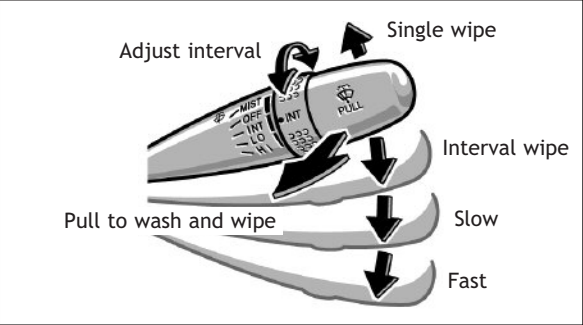

Windows-Power (if equipped)


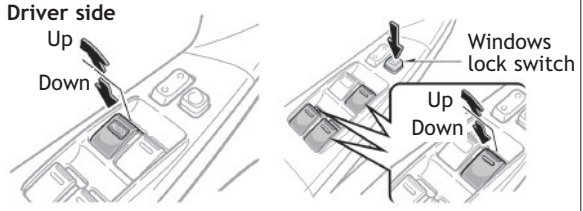


Window operation


**Automatic down operation (Driver side only)** Push the switch completely down and release to fully open. To stop window mid-way, lightly pull up the switch.

**Window lock switch** Deactivates all passenger windows. Driver's window remains operable.


Moonroof (if equipped)

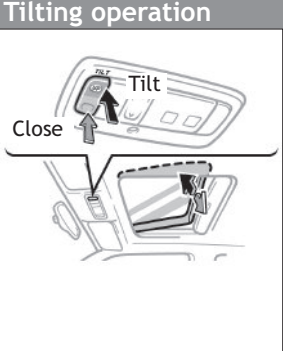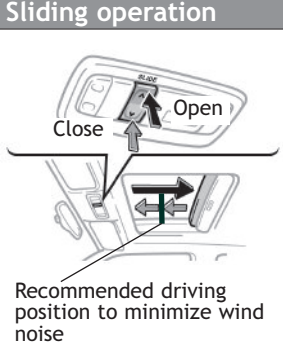



Door locks-Power (if equipped)

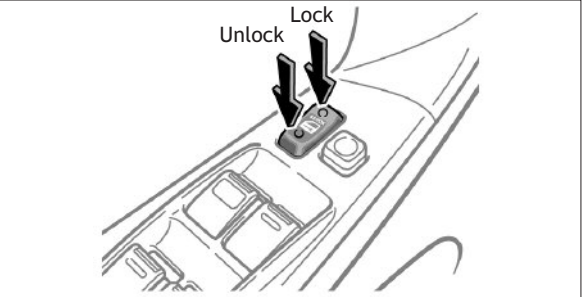



Light control-Instrument panel

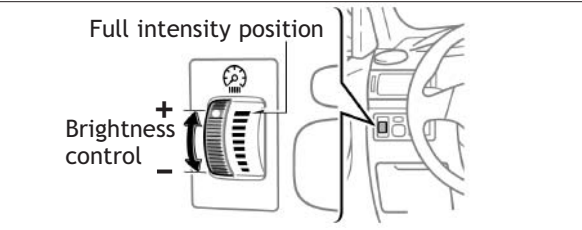

Cup holders

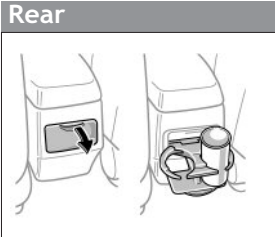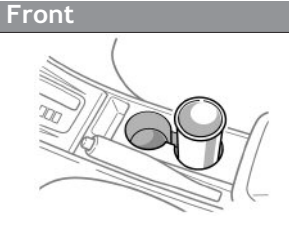


Power outlets

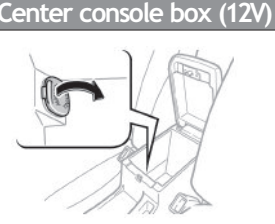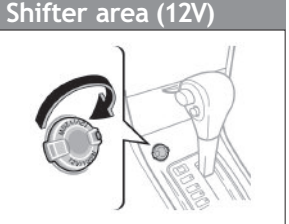


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.

## Audio

### Type 1

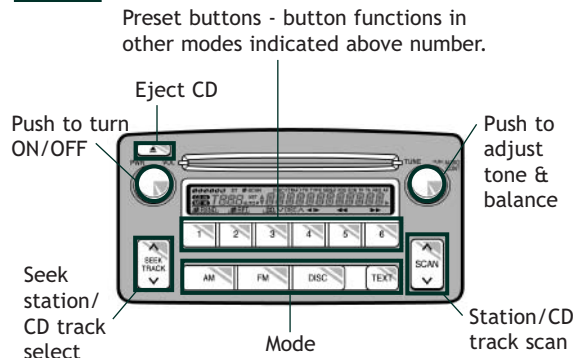

### Type 2 additional functions

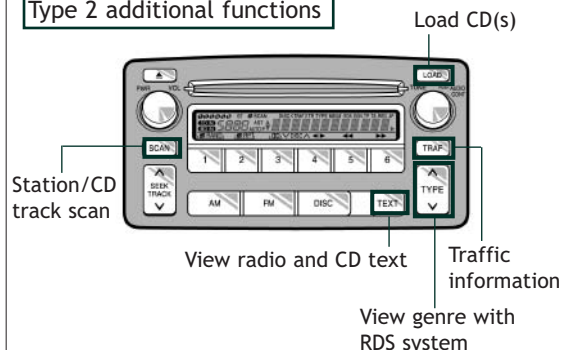

## RADIO

**To preset stations** Tune in the desired station and press and hold a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.

**To scan stations** Push “SCAN.” Push and hold to scan preset stations. Push again to hold selection.

### RDS (Radio Data System-FM only)(Type 2 only)

- Push TYPE “^” or “v” to view current program genre. Push again within 6 seconds to select new genre.
- Push “SEEK/TRACK” or “SCAN” to find same genre programs.
- Push “TEXT” to receive information transmitted from radio stations.


## CD PLAYER

**To scan tracks on a disc** Push either side of “SCAN.” Push again to hold selection.


### CD Changer (Type 2 only)

- To load one disc Push “LOAD” and insert one disc.
- To load multiple discs Push and hold “LOAD” until you hear a beep. Insert one disc. *Wait until the green indicator illuminates and shutter opens to insert next disc.*

## Clock

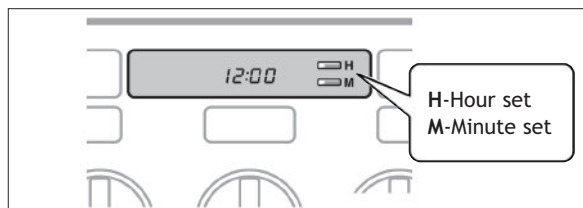


## Air Conditioning (if equipped)/Heating

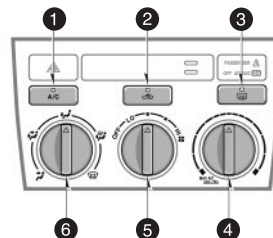

- 1 Air Conditioning ON/OFF
  - 2 Fresh or recirculate cabin air
  - 3 Rear defogger
  - 4 Temperature
  - 5 Fan speed
  - 6 Air flow vent
- In “” or “” mode, use fresh air (“” indicator “OFF”) to reduce window fogging.


# SAFETY AND EMERGENCY FEATURES

## Doors-Child safety locks

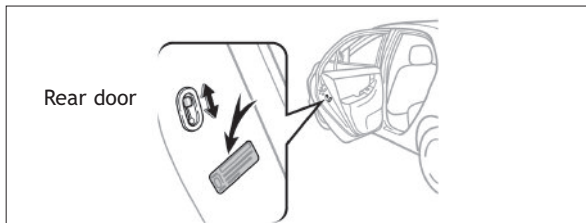

Moving the lever to “LOCK” will allow the door to be opened only from the outside.


## Seat belts

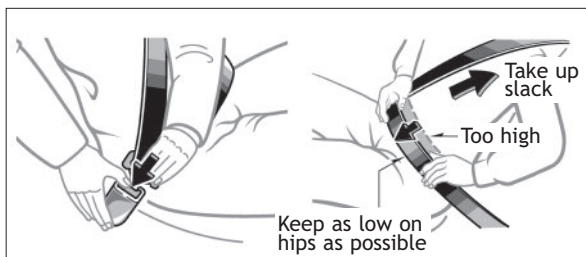

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

## Tire Pressure Warning System reset (if equipped)

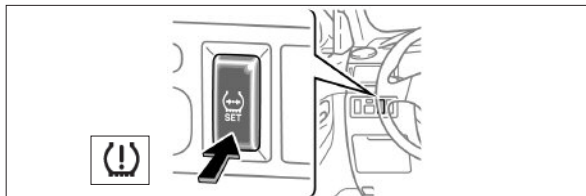

If tire pressure becomes critically low on any of the tires (excluding compact spare), indicator comes on. Pushing “SET” button should not turn off the light. Correctly adjusting tire inflation will turn off the light after a few minutes. After replacing tire or wheels, push and hold “SET” button until the indicator blinks 3 times.

# 2007 Corolla

This *Pocket Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Pocket Reference Guide* is not intended as a substitute for the *Owner's Manual* located in the vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of the vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Corolla.

## ! A word about safe vehicle operations


This *Pocket Reference Guide* is not a full description Corolla operations. Every Corolla owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Pocket Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.


## Seat belts-Shoulder belt anchor

Squeeze lock release  
to lower or raise

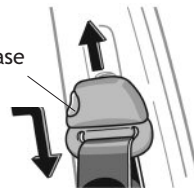


## Spare tire & tools

### Tool location

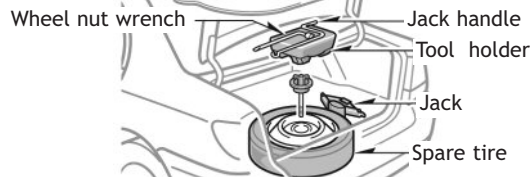

### Removing the spare tire

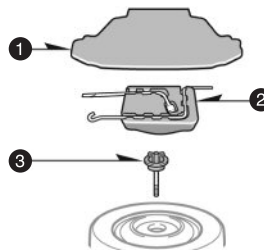

- 1 Raise the luggage compartment floor panel.
- 2 Remove the tool holder and tools.
- 3 Loosen and remove bolt with spacer.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

## Trunk-Internal release

